


# HOW TO ASSEMBLE TALL CABINETS

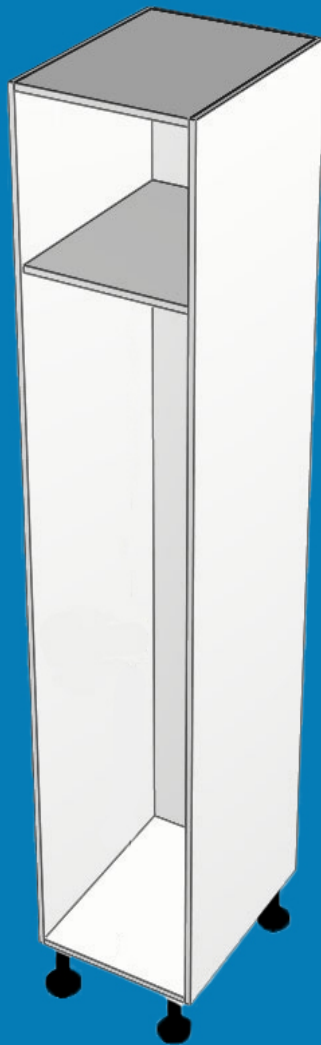

## Tools Required:



Electric Drill

+ Phillips screwdriver bit

+ 3mm Countersink bit




Mallet

## Step 1:

Locate all the required parts for your eKitchens cabinet

You will need:

1. Top Panel
2. Bottom Panel
3. Right Side Panel
4. Left Side Panel
5. Back Panel
6. Fixed shelf (If any)
7. Adjustable legs
8. screws

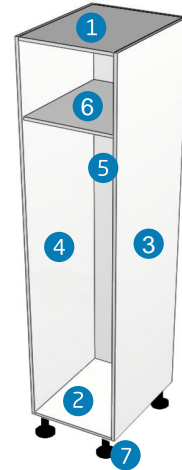

### Important Information: READ FIRST

~Always pre-drill for screws first using the 3mm Drill Bit.


~Ensure all edges are flush before fixing pieces in place. Use a rubber mallet to help align edges as needed.

~Tall Cabinets may require 2 people to assemble and move.

~If screw holes are seen along the Mortise & Tenon inside the cabinet, the shelf/panel needs to be flipped around the other way.

## Step 2:


Lay the bottom panel flat on surface and knock in or screw in (35mm screws) all your adjustable leg bases, DO NOT attach the leg to it's base yet. All bases should point towards the front or back of the cabinet (closest side).

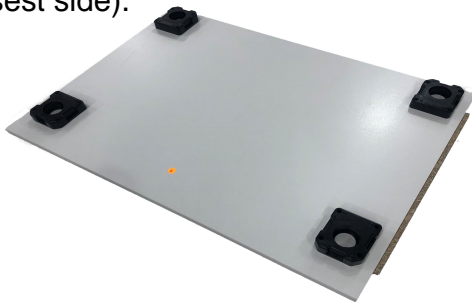

## Step 3:

Lay the right side panel flat on surface with grooves facing upwards.


**TIP:** You can tell what end is left or right on a pantry because the Adjustable Shelf holes are always closer to the bottom

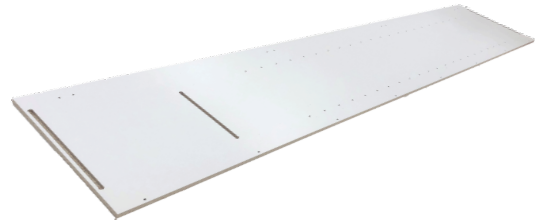

## Step 4:

Attach the top panel, bottom panel and any fixed shelves using the Mortise & Tenon.

\*See Important Information: no screw holes should be seen in the joins.

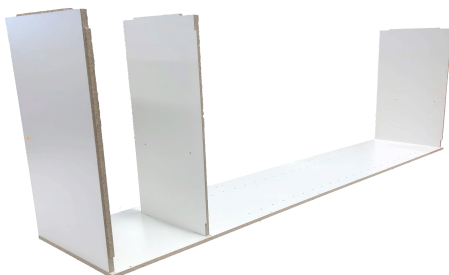

## Step 5:

Attach the back panel using the Mortise & Tenons and ensure the edges are all flush before screwing the back panel in place using 45mm Screws.



## Step 6:

Attach the left side panel using the Mortise & Tenons and screw in place using the 45mm screws.



## Step 7:

Carefully roll the cabinet over onto the left side panel while holding the unscrewed side in place. Use the mallet to ensure edges are flush and screw the right side panel in place using 45mm screws.



## Step 8:

Attach your Smart Adjustable Legs into the leg bases and adjust the legs to the same height as your kickboard.

**Please note:** Smart Legs are adjustable from 88mm - 180mm, to achieve heights lower than 130mm, please remove leg from it's leg base and 1/4 turn then push back in as shown below.



## Step 9:

Attach hinge plates ensuring the arrows on the plates are pointing towards the front of the cabinet



## Step 10:

Stand your cabinet onto it's legs carefully and you have now finished assembling your eKitchens Tall Cabinet!

**TIP:** When standing tall cabinets up, be sure to have someone help you lift the cabinet up flat to eliminate breaking the legs



