

HOW TO ASSEMBLE OPEN CORNER CABINETS



Tools Required:



Electric Drill

+ Phillips screwdriver bit

+ 3mm countersink bit




Mallet

Step 1:

Locate all the required parts for your eKitchens cabinet.

You will need:

1. Front Rail
2. Bottom Panel
3. Right Side Panel
4. Left Side Panel
5. Shelf (If any)
6. Left Back Panel
7. Right Back Panel
8. Adjustable Legs
9. Screws

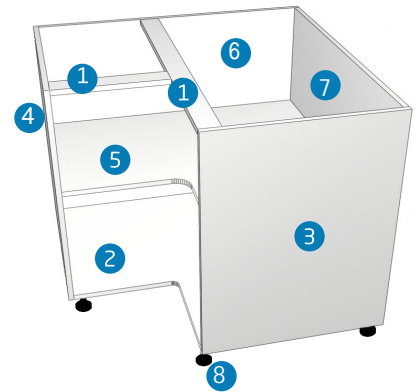

Important Information: READ FIRST


-Always pre-drill for screws first using the 3mm drill Bit.
-Knock in any bench top connectors while the carcass pieces are flat on surface.

-Ensure all edges are flush before fixing pieces in place. Use a rubber mallet to help align edges as needed.

-If screw holes are seen along the mortise & Tenon inside the cabinet, the shelf/panel needs to be flipped around the other way.


Step 2:

Lay the bottom panel flat on surface and knock in or screw in (35mm screws) all your adjustable leg bases, do not attach the leg to it's base. All bases should point towards the front or back of the cabinet (closest side).

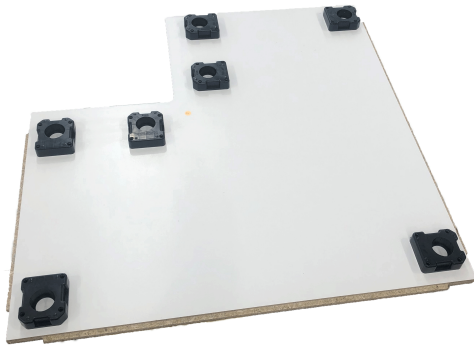

Step 3:

Lay both the left back panel & right back panel flat on surface with grooves facing upwards.

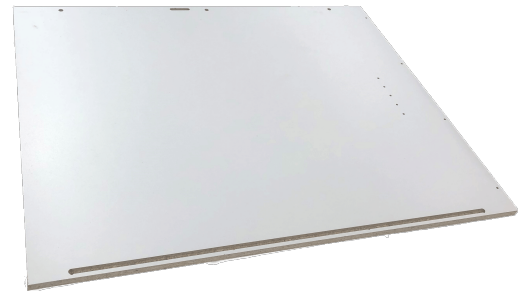

Step 4:

Attach the bottom panel to the back panel that has screw holes along it's back edge, using the Mortise & Tenon.




Step 5:

Attach the remaining back panel using the Mortise & Tenon and use a mallet to ensure edges are flush. Fix in place using 45mm screws along the bottom.



Step 6:

Attach the left side panel using the Mortise & Tenon and ensure edges are flush. Fix in place using 45mm screws along the bottom.

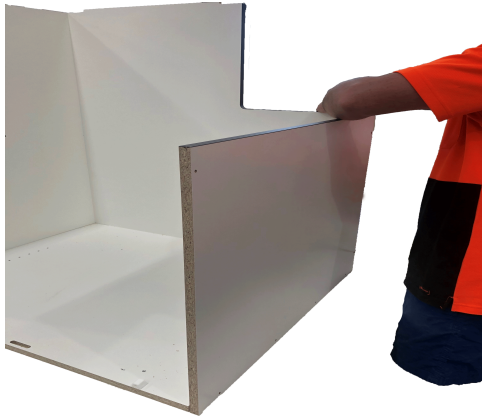

Step 7:

Stand at the top of the cabinet holding both sides in place and stand the cabinet onto its base.



Step 8:

Use 45mm screws to fix the left side panel in place along the back edge.




Step 9:

Use 45mm screws to fix the back panels in place along the back corner.



Step 10:

If any required, assemble corner accessories (e.g. corner carousels), following instructions provided in the box.

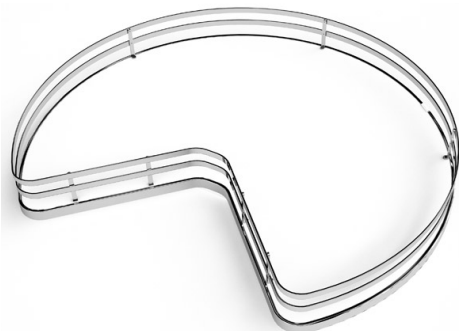

Step 11:

Lay the cabinet onto the right back panel & attach the right side panel using the Mortise & Tenons, fix in place using 45mm screws along the bottom.



Step 12:

Stand the cabinet onto its base and fix the right side panel in place along the back edge.




Step 13:

Locate the long front rail and the silver joining plate. Screw the plate on to the long front rail using a 16mm screw.




Step 14:

Attach the long front rail to the cabinet using the Mortise & Tenons and screw in the side screw only (not the back) using a 45mm screw.

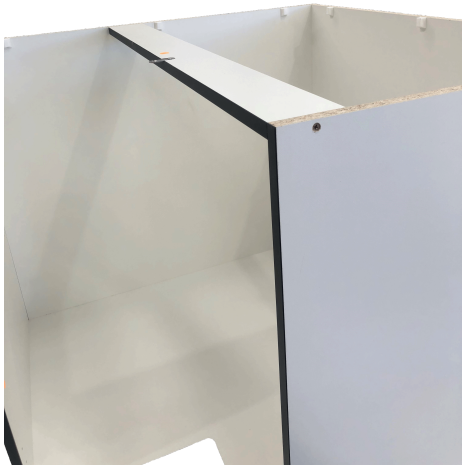


Step 15:

Attach the shorter front rail using the Mortise & Tenon and screw in the side of the cabinet using a 45mm screw.

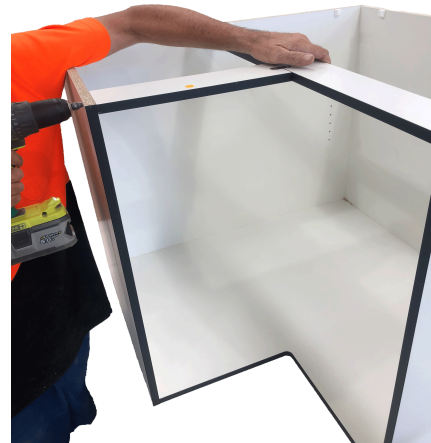

Step 16:

Ensure the joining plate connection is lined up correctly and hold the long rail in tightly, while screwing in the remaining side of the joining plate.

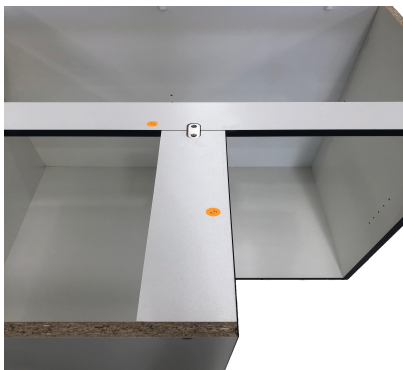


Step 17:

Fix the long front rail in place at the back using a 45mm screw.



Step 18:

Install any corner accessories and shelves if required, following the instructions provided in the box.

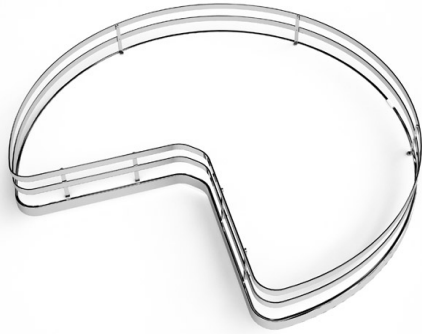

Step 19:

Attach hinge plates where required ensuring the arrow on the plates is facing the front of the cabinet.



Step 20:

Lay the cabinet on it's back and attach your Smart Adjustable Legs into the Leg bases and adjust to the same height as your kickboard.

Please note: Smart Legs are adjustable from 88mm - 180mm, to achieve heights lower than 130mm, please remove leg from it's leg base and 1/4 turn then push back in as shown below.



Step 21:

Stand the cabinet onto it's legs carefully and you have now finished assembling your eKitchens cabinet!



